



KITCHEN *Living*

12 cup programmable coffee maker

USER GUIDE



Now that you have purchased a Kitchen Living product you can rest assured in the knowledge that as well as your 2 year parts and labor warranty you have the added peace of mind of dedicated helplines and web support.

AFTER SALES SUPPORT

☎ 866-235-5029

💻 mp656@messageplex.com

MODEL: 44669, 03/14, CM2001T

Welcome!

You have made an excellent choice with the purchase of this quality Kitchen Living brand product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Kitchen Living product is backed by a comprehensive 2 year manufacturer's warranty and an outstanding after sales service through our dedicated helpline.

We hope you will enjoy using your purchase for many years to come.

If you require technical support, or in the unlikely event that your purchase is faulty, please telephone our helpline for immediate assistance. Faulty product claims made within the 2 year warranty period will be repaired or replaced free of charge, provided that you have satisfactory proof of purchase (keep your receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.

Contents

01	Welcome
03	Important Safeguards
05	Parts List
06	Getting Started
07	Instructions for Use
10	Other Useful Information
12	Hints for Great-Tasting Coffee
13	Warranty Card
14	Environment Friendly Disposal



Important Safety Instructions

READ ALL INSTRUCTIONS

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- Make sure that your outlet voltage and circuit frequency correspond to the voltage stated on the Rating Plate of the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.

CAUTION: Keep this Coffee Maker out of reach of children.

- Take care when handling the appliance. Always unplug it when unattended and before assembling, disassembling, changing accessories, cleaning or storage.
- Do not let the cord hang over the edge of a table or benchtop. Do not let it touch hot surfaces or become knotted. Protect it from sharp edges.

CAUTION: To reduce the risk of electrocution, never operate this product with wet hands, never immerse it in water or use it where it can drop into water.

- Do not use this Coffee Maker outdoors. It is intended for indoor household use only.

CAUTION: Switch off and unplug the appliance after each use. Ensure the unit is completely cool before cleaning.

- Do not use this Coffee Maker if it malfunctions or if the power cord is damaged. A damaged supply cord must be replaced by the manufacturer or its authorised service centre. Contact the after sales support line for advice on return or repair.
- Check the power cord regularly for damage.
- Do not use this appliance for any purpose other than those stated in this manual.
- Do not place a hot container on a hot or cold surface.

 
Important Safety Instructions (Cont.)

- This appliance is intended for domestic use only. It is not suitable for commercial use. Do not use the appliance for anything other than its intended purpose and only use it as described in this manual.
- Improper installation or inappropriate use may result in fire, electric shock, personal injury and/or damage to the unit. We assume no responsibility for any eventual damages caused by improper or faulty use.
- Always place the appliance on a level, stable and heat resistant work surface, away from water splashes.
- Do not place or use this appliance on a hotplate or near a naked flame (gas cooker).
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury.
- Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.


SAVE THESE INSTRUCTIONS



Parts List

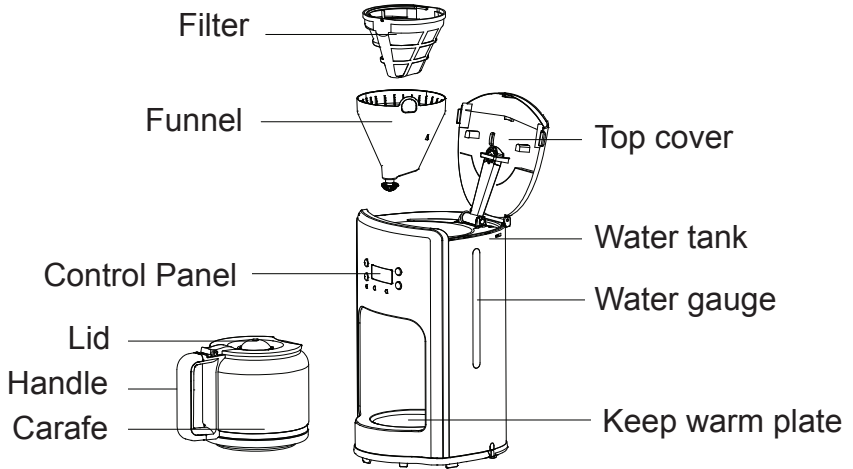

Control Panel

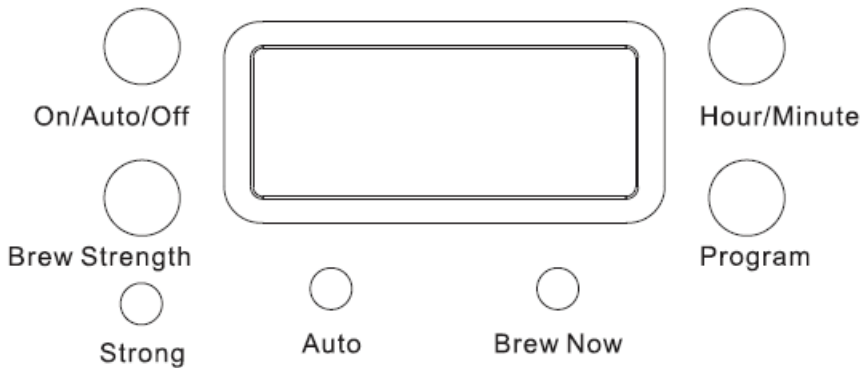 

Getting Started

Before First Use

- Remove all packaging materials from the appliance and dispose of them responsibly. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Inspect the cord and plug for damage or wear before each use. Do not use the appliance if any part has been damaged or is not working properly.
- Check that all accessories are complete and the unit is not damaged. Add water into the water tank to the max level and brew water without coffee powder, empty the water out and repeat several times, then discard the water. Clean all detachable parts thoroughly with warm water.

Setting the Clock

Plug the power cord into the outlet. The LED will display “12:00” and the colon will flash.

To set the clock:

1. Hold down the HOUR/MIN button to adjust the time.

Note: By holding the HOUR/MIN button down it will quickly skip through the hours.

3. Wait 15 seconds to confirm the clock setting.

Instructions for Use

Using your Coffee Maker

1. Open the top lid and fill the water tank with drinking water. The water level should not exceed MAX level marked inside the tank.
2. Place the funnel into the funnel support and make sure it is assembled correctly. Then insert the coffee filter in to the unit.
3. Add coffee powder into the filter. Usually a cup of coffee needs a level spoon of coffee powder, this can be adjusted according to personal taste. Then close the top lid.
4. Place the glass carafe on the warming plate.
5. Press the ON/AUTO/OFF button one time to start the brewing process.
6. The brewing process can be interrupted by pressing the ON/AUTO/OFF button twice at any time during operation, and the brew indicator will be extinguished. The appliance will continue brewing once ON/AUTO/OFF is pressed again.
7. Press Brew Strength button one time, Strong indicator will be green. The appliance will begin to work, the cycle works for 20 seconds then stops for 10 seconds. The Brew strength function can also be used whilst coffee is brewing

Note: You can take out the carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

8. When brewing is finished, the coffee maker will be kept warm for 2 hours, the power will automatically shut off after this period of time. For an optimum coffee taste, serve it just after brewing.
9. If you want to serve the coffee immediately, you shall remove the carafe to serve when finish brewing.

Warning: The temperature of the coffee is very hot, be careful when pouring.

Instructions for Use (Cont.)

Note: the coffee you get will be less than the water you have added, as some water is absorbed by coffee grounds.

10. Always turn the Coffee Maker off and disconnect from the power supply when not use.
11. Once the Coffee Maker has finished brewing, remove the carafe to serve. (about one minute after the coffee stops dripping out.)

Note: Leave the carafe to rest for one minute after brewing.

 
12. The Coffee can be kept warm for 2 hours after brewing.



Instructions for Use (Cont.)

Automatic Start Function

This Coffee Maker has an automatic start function you can set to start brewing at a later time.

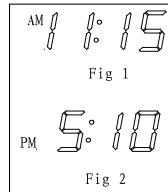

If you do not want the coffee maker to start operation immediately, for example now it is 11:15AM, you want the coffee maker to automatically start at 5:10PM in the evening, first follow steps 1 to 4 of above section, then you can set the automatic start function as follows:

1. Press PROGRAM button one time, the AUTO indicator will flash green.
2. Hold the HOUR/MIN button to set the present time (real clock), that is 11:15 AM (See fig. 1).

Note: the time cycle is 12 hours.

3. Press PROGRAM button once and the AUTO indicator will flash green.
4. Set the delayed starting time by holding the HOUR/MIN button, that is 5:10 PM (see Fig. 2).
5. After setting the presetting time, press the PROG button once and the AUTO indicator will be extinguished, the LED will display the current clock.
6. Press the ON/AUTO/OFF button twice, the AUTO indicator will illuminate green. The LED will display the current clock. You may see the automatic start time by pressing PROG.

Note: You may cancel the automatic start function by pressing ON/AUTO/OFF button once to stop machine, if you want to brew coffee again immediately, you can press ON/AUTO/OFF button once to start brewing immediately. If you want to change the automatic start time, only follow the above 1-6 steps again.

When the time is due the AUTO indicator will be extinguished and the BREW indicator will be illuminated, then the unit starts brewing.

7. When brewing is finished, the coffee maker will be kept warm for 2 hours, the power will automatically shut off after this period of time. For an optimum coffee taste, serve it just after brewing.

Other Useful Information

Cleaning and Maintenance

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure the plug is first removed from the wall outlet.

- 1) Clean all detachable parts after each use in warm, soapy water.
- 2) Wipe the product's exterior surfaces with a soft, damp cloth to remove stains.
- 3) Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. Wipe off the area with a clean, dry cloth after each use of the product.
- 4) Wipe the warming plate with a clean, damp cloth. Never use rough, abrasive materials or cleaners on the warming plate.
- 5) Replace all parts and keep ready for the next use.



Other Useful Information (Cont.)

Removing Mineral Deposits

From time to time, you may need to clean off any mineral deposits (limescale) left by water inside your Coffee Maker to keep it operating efficiently. How often you have to do this depends on the water hardness in your area and on how often you use the machine.

You can use a commercially available descaling agent for household products (according to the instructions on the packet) to descale the Coffee Maker, if the product is recommended for use in an automatic coffee maker. Or simply use a water and vinegar mixture and proceed according to the steps below.

1. Fill the water tank with water and descaler to the MAX level in the gauge of coffee maker (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler", you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. Place the carafe on the heating plate and align the carafe with the center of the brewing basket.
3. Press the ON/AUTO/OFF button once and the BREW indicator will be illuminated red. After a while, water will drop out automatically.
4. After percolating the equivalent then switch off the appliance by pressing the ON/AUTO/OFF button again. The BREW indicator will be extinguished.
5. Let the solution work 15 minutes then repeat steps 3-5 again.
6. Turn the appliance on by pressing the ON/AUTO/OFF button once and run off the water until the water tank is completely empty.
7. Rinse by operating the appliance with water at least 3 times.
8. When the cycle is completed turn the Coffee Maker off.

Hints For Great-Tasting Coffee

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee’ flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.



KITCHEN *Living*

12 cup programmable coffee maker

Your details:

Name _____

Address _____



_____ E mail _____

Date of purchase* _____

* We recommend you keep the receipt with this warranty card.

Location of purchase _____

Description of malfunction:

Return your completed warranty card to:

ALDI Customer Service

NW Fulfillment
549 Heartland Drive
Suite E
Sugar Grove IL 60554

AFTER SALES SUPPORT



866-235-5029



mp656@messageplex.com

MODEL: 44669, 03/14, CM2001T

2

YEAR WARRANTY



Environment Friendly Disposal

Responsible disposal

At the end of its working life, do not throw this appliance out with your household trash.

Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

