

EASY  
HOME®



# USER GUIDE

## HANDHELD FABRIC STEAMER



NOW THAT YOU HAVE PURCHASED AN EASY HOME® PRODUCT YOU CAN REST ASSURED IN THE KNOWLEDGE THAT AS WELL AS YOUR MANUFACTURER'S WARRANTY YOU HAVE THE ADDED PEACE OF MIND OF DEDICATED HELPLINES AND WEB SUPPORT

### AFTER SALES SUPPORT

☎ 1-888-380-2111 📧 info@smartekusa.com

MODEL: ST-50N, 08/15, 44614

**2**

YEAR WARRANTY

LAUNDRY

# Contents

---

3

- 01 Operation Instructions
- 04 Troubleshooting
- 05 Safety Instructions



# Operation Instructions

1

## Filling the Steamer with Water

- Never fill the water reservoir when the power cord is plugged in
- Unplug the cord if the appliance is plugged in
- Allow the appliance to cool for at least 5 minutes if it has been used

**WARNING:** Never add cold water to hot water. Steam may shoot out of the filling hole and cause injuries. Always let the appliance cool before adding water.

- Place the steamer on a flat, level surface
- Fill the water reservoir with the measuring cup enclosed
- Never fill the water pass MAX
- Place back the water reservoir cap
- The steamer should always be used with the supplied accessories in order to reduce water spilling



## Steaming Fabrics and Linens

**NOTE** The water reservoir must be filled before proceeding with the following steps.

- 1 Plug the steam power cord into an electrical outlet. The heater indicator light will illuminate when its turned on.
- 2 The steamer will emit steam after approximately 3 minutes.
- 3 Direct the steamer nozzle towards the materials you want the steamer.

**CAUTION:** never point the steamer nozzle towards your body, other people pets or plants.

- 4 Keep the flow of steam focused on the material. Using a slight back and forth motion will further enhance the steaming process.

## Steaming Garments

- 1 Place the garment on a clean hanger.
- 2 Start to steam from the bottom of the garment. The steam will rise along outside and inside of the fabric, removing wrinkles. Continue to steam slowly from bottom to top of the garment.
- 3 Point the steam away from the garment and smooth the fabric with your free hand.
- 4 Repeat the above steps as necessary until garment is free of wrinkle.

## Steaming tip

- Steaming both sides of the fabric will help to remove stubborn wrinkles.
- Delicate fabrics need to be steamed carefully to avoid damages caused by water spotting.
- Draperies and curtains can be steamed while still hanging. Precaution should be taken while using a ladder or a step ladder. Do not use stool, a chair or revolving chair.
- To steam towels, handkerchiefs and napkins, hang them over a rod or towel.

## Removing the mineral build-up

The best way to avoid mineral build-up is using distilled or dematerialized water in your steamer. It is not advised to use the municipal water because it is high in mineral content.

- 1 Unplug the power cord if the steam is plugged and allow it to cool.
- 2 Empty the remaining water into a sink to minimize the mineral build-up.
- 3 Reattach the water reservoir cap, do not tighten the cap, because it will be easier to remove it the next time you use the steamer.
- 4 Store the steamer and all the supplied accessories together in one box (**NOTE** the original packing is convenient storage box for your steamer).
- 5 Store the steamer in a cool and dry location.

# Troubleshooting

## 2

Problem	Possible Cause	Solution
The steamer fails to fill up	The steamer is not plugged in	Plug the stem's power cord into an electrical outlet
	The household circuit breaker has tripped or there is a blown fuse in the electrical circuit	Reset the household circuit breaker or replace the blown fuse. Contact an electrician or your area electrical provider
The steamer heats up but there is no steam	The water reservoir is empty	Refill the water reservoir
	There is mineral build-up in the steamer	Remove the mineral build-up
The steamer flow is intermittent	There is mineral build-up in the steamer	It is normal for the flow of the steam to stop for a few seconds. If it stays off longer periods, remove the mineral build-up



# Safety Instructions

## 3

When using your appliance, basic precautions should always be followed. Read all instructions before use. Save this user manual for further reference.

- 1 The appliance is not a toy, **NEVER** let children play with it.
- 2 Do not operate any appliance with a damage cord, plug or steam hose or after the appliance malfunctions, or is dropped or damaged in any matter.
- 3 Do not disassemble or attempt to repair the appliance.
- 4 To avoid electrical shock, do not immerse the appliance in water or other liquid.
- 5 To reduce the risk of contact with hot water emitting from steam vents, check the appliance before each use by holding it away from your body.
- 6 Use this appliance only in an up or down vertical motion. Never use steam head in a horizontal position, or tilt into a backward position, this may result in a hot water spill. Let the appliance cool completely before putting it away.
- 7 Burns could occur from touching hot parts, hot water or steam. Use care when you empty a steamer appliance, the hot water would still be in the reservoir.
- 8 Do not direct steam to people, animals or steam cloths while they are being worn.
- 9 Always disconnect appliance from electrical outlet when filling with water, emptying the water, or not in use.
- 10 If an extension cord is being used, the marked electrical rating should be at least as great as the electrical rating of the appliance. Cords rated for less amperage may overheat. Care should be taken when using the extension cord so that it cannot be pulled or tripped over.



# HANDHELD FABRIC STEAMER

**Your details:**

**Name** \_\_\_\_\_

**Address** \_\_\_\_\_

\_\_\_\_\_



\_\_\_\_\_ **E mail** \_\_\_\_\_

**Date of purchase\*** \_\_\_\_\_

\* We recommend you keep the receipt with this warranty card

**Location of purchase** \_\_\_\_\_

**Description of malfunction:**

**Return your completed warranty card to:**

**Smartek USA Inc.  
49 Bartlett Sreet  
Brooklyn, NY 11206  
United States  
info@smartekusa.com**

**AFTER SALES SUPPORT**



USA

**1-888-380-2111**



**info@smartekusa.com**

**MODEL: ST-50N, 08/15, 44614**

**2**

**YEAR WARRANTY**

